



## AUTO BURST

*These Auto Burst Instructions is an outdated version. If you purchased your controller after 1/14/2019 or want to get familiar with the latest software update please visit [this page](#).*

### Navigate To:

- [What is Auto Burst Mod?](#)
- [How Do I Operate Auto Burst Mod?](#)
- [What Games Is Auto Burst Mod Compatible With?](#)
- [What Is Programming Mode?](#)
- [How do I program in my very own custom Auto Burst speed?](#)

### What is Auto Burst Mod?

The function of Auto Burst mod is similar to Rapid Fire, except it shoot in “bursts”. Firing in bursts will make any semi-automatic weapon perform as a “military-style” rifle. For instance, when using a single-fire semi-auto rifle such as the M14 EBR, you can simulate the burst firing. Let’s say you want it to shoot 3 shots - you will need to set a burst of 3 shots and once you pull Fire Trigger (RT in default button layout), your gun will shoot the desired amount of shots and will stop until you pull the trigger again to do another burst of 3 shots. Auto Burst increases accuracy and eliminates the recoil significantly.

### How Do I Operate Auto Burst Mod?

#### To activate:

- *Hold down mod switch on the back*
- *Tap D-pad right button. LED 1 indicator will glow **GREEN**. Now equip your soldier with a semi-automatic gun. Once your soldier is equipped, press and hold your fire-weapon button (RT). The modchip will take over and fire a burst of bullets. Whether you get a burst of 2 shots, 3 shots, 4 shots or 5 shots depends on which mode you’re in (see chart below).*

#### To scroll to the next mode:

- *Make sure Auto Burst Mod is ON in order to change to the next modes*
- *Hold down mod switch on the back*
- *Hold down D-pad Right button. LED 1 will blink **GREEN**. Count the number of blinks on LED 1 and release the buttons when you arrive on the mode you want. The mod will save your selection even after you power off your controller.*

Auto Burst Mod comes with four configurations. Each configuration has default speeds, However, you can customize these speeds to your exact liking (refer to "What Is Programming Mod?" below).

The four default modes are as follows:

- **Mode 1 - Your gun will shoot a burst of 2 shots at 4.0 shots-per-second**
- **Mode 2 - Your gun will shoot a burst of 3 shots at 4.0 shots-per-second**
- **Mode 3 - Your gun will shoot a burst of 4 shots at 4.0 shots-per-second**
- **Mode 4 - Your gun will shoot a burst of 5 shots at 4.0 shots-per-second**

#### **To turn OFF:**

- *Hold down mod switch on the back*
- *Tap D-pad down button. First LED will turn OFF. Auto Burst is OFF.*

## **What Games Is Auto Burst Mod Compatible With?**

Auto Burst is compatible with all first person shooter games on the market such as infinite Warfare, Black Ops 3, Advanced Warfare, Ghosts, Destiny, Battlefield 1, Titanfall and many more.

## **What Is Programming Mode?**

### **Don't like the pre-tuned speed we've provided? Create-your-own!**

Reprogram your Auto Burst modes to any speed from 5 shots-per-second up to 99 shots-per-second. Auto Burst speed is programmed by individually setting the tens digit, the ones digit, and the decimal digit. For example, if the speed is 12.0 shots per second. "1" is the tens digit, "2" is the ones digit, and "0" is the decimal digit. Any time an LED flashes very quickly, this means one of your numbers is set to "0". Otherwise, it will slowly blink the number.

It's also important to know that the software developers for each video game may have set a universal speed cap. The cap is different for every game. If you try to dial in your Auto Burst speed above this cap, your gun will actually shoot slower, or not shoot at all.

## **How do I program in my very own custom Auto Burst speed?**

- **Turn on Auto Burst and scroll to the mode you would like to edit.**
- **Hold the mod switch on the back and then tap the Sync button. All four LED's will light up in **WHITE** to let you know that it's waiting for further input.**
- **Tap D-pad Right button. All four LED's will blink in **GREEN** to let you know we're going to start programming the Auto Burst speed. Let's say your speed started at 6.0 shots per second. The mod will blink the "tens" digit on LED 1. In this case, the tens digit is 0 (since you're at 6.0 shots, there's no digit in the tens place). The mod will do a very quick flash to indicate a "0".**
- **Tap the Left Trigger to decrease the tens digit, or tap the right trigger to increase the tens digit. The mod will blink in **GREEN** on LED 1 to let you know what the current number is. When you're happy with the number.**
- **Tap the mod switch to move to the next number. Now we're at the "ones" digit and they will blink on LED 2. Follow the procedure from above.**
- **Tap the Left Trigger to decrease the ones digit, and tap the Right Trigger to increase**

the ones digit.

- **Tap the mod switch to save that digit and move to the decimal place. Lastly, we're at the decimal place. Digits will blink on LED 3. Follow the procedure from above one last time.**
- **Tap the Left Trigger to decrease the decimal, and tap the Right Trigger to increase the decimal.**
- **Tap the mod switch to save your selection. The mod will blink all LED's in GREEN three more times to let you know that your new speed was saved.**

The controller will always remember the last programming speed you have before powering down.