



## MEGA MODZ DROP SHOT+JUMP SHOT MOD FOR XBOX SERIES X/ONE

*You're about to read the latest and up to date Xbox One S Modded Controller instructions. If you've purchased your controller before 4/19/2019 then visit the [archived page](#) as you may not happen to have the updated version.*

This article contains the following sections:

- **[At Glance](#)**
- **[Turning the Mod ON & OFF](#)**
- **[Checking Current Sub-Mode](#)**
- **[Changing Sub-Modes](#)**
- **[Setting Up Custom Values](#)**
- **[Compatible Games](#)**

### AT GLANCE

Drop Shot makes your character drop to the ground automatically each time you fire your weapon, allowing the bullets to hit the opponent's entire body while also forcing the opponent to aim downward in order to get a shot off.

In COD games allowing sliding action (Ghosts, Advanced Warfare, Black Ops III ,Infinite Warfare), pressing on the Fire Trigger while sprinting will make your soldier slide and shoot at the same time. The sliding mechanics was added to the games to make it harder to dropshot, however, you will find the mod beneficial for your gameplay, as it will let you slide at a relatively decent speed and shoot simultaneously.

Pressing on the Fire Button while walking or standing still will make your soldier drop to the ground in all COD games.

Mega Modz Modding Technology will allow you to cancel the Dropshot function by pressing ADS button before the Right Trigger, if you want to shoot normally without dropping to the ground.

Drop Shooting was nerfed in Black Ops 4, as the game team wasn't satisfied with the risk-free nature in which the move could be executed.

When Jump Shot is enabled, your soldier automatically jumps up in the air once you fire your weapon, and throws your opponent's aim off. This ability can be wildly beneficial, as jumping while instantaneously shooting is a great way to avoid getting shot. Jump Shot

mod will allow you to win a lot more one-on-one engagements.

 
Jump Shot Mod can also be configured to Thrust Jumping and shooting simultaneously on a single fire-button press in futuristic COD titles such as Advanced Warfare, Black Ops III, Infinite Warfare.

## IN DEPTH

### Turning the Mod ON & OFF

#### To turn the Mod ON

- Hold the mod switch and then tap B button

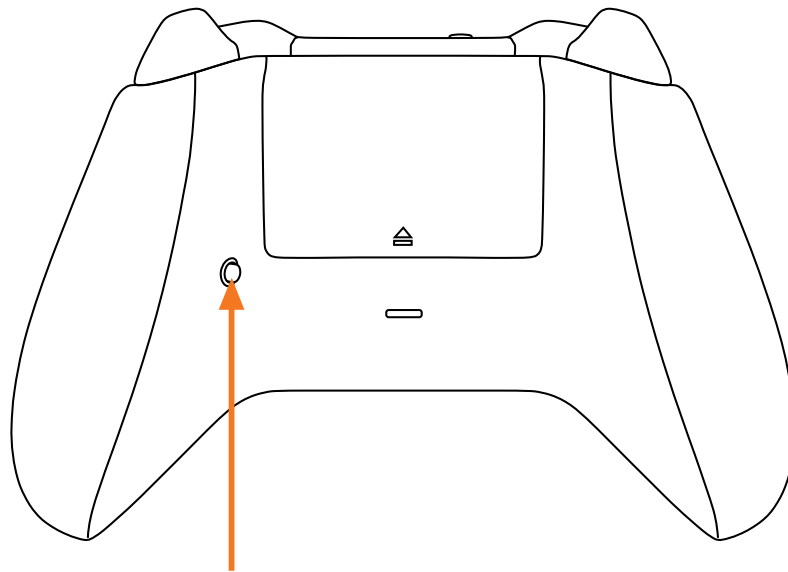

**1 STEP. HOLD DOWN MOD BUTTON**

**2 STEP. TAP B BUTTON**



One of the open LEDs will glow in ORANGE indicating that special feature has been activated.

 


- **To initiate a jump shot or a drop shot, just press the fire weapon button. Your soldier will jump or drop according to the mode you are currently in.**


Want to learn more how LED MOD Indicator works? [Click here](#)

### **To turn the Mod OFF**

The mod can be turned OFF the same way it has been turned ON (see above). Mods located on 2 - 4 LED Indicator slots (Including Drop Shot & Jump Shot) can be turned OFF all at once by holding down the mod button on the back and tapping the button A.

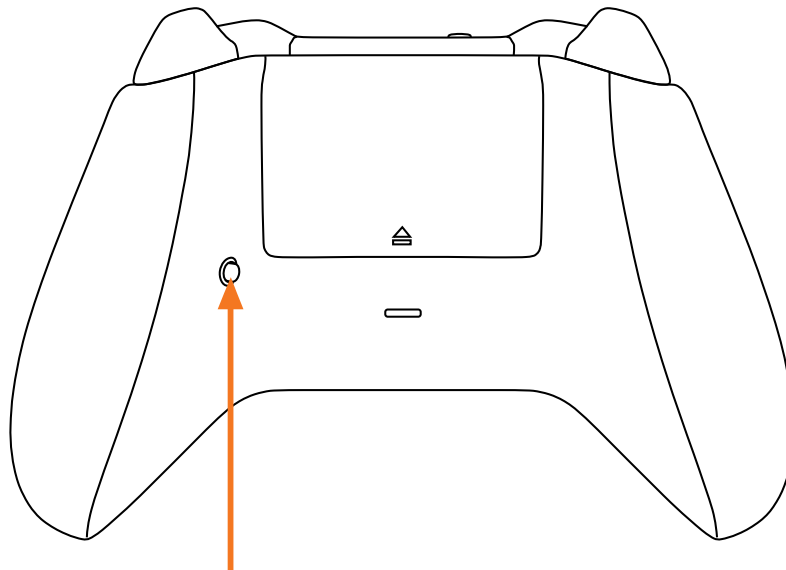

**1 STEP. HOLD DOWN MOD BUTTON**

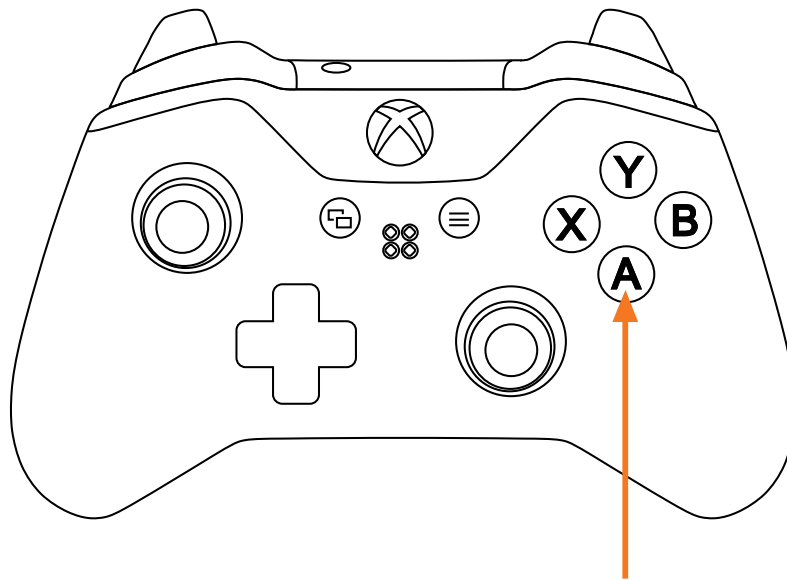 


## 2 STEP. TAP A BUTTON

All 2, 3 and 4 LEDs will turn off indicating that all special features have been turned OFF.

## Checking Current Sub-Mode

The mod offers 6 sub-modes. You can always check what sub-mode you have currently active by following these steps:

 - **Make sure Drop Shot & Jump Shot mod is ON.**
- **Hold down the mod button on the back.**
- **Hold down the B button for 3 seconds.**

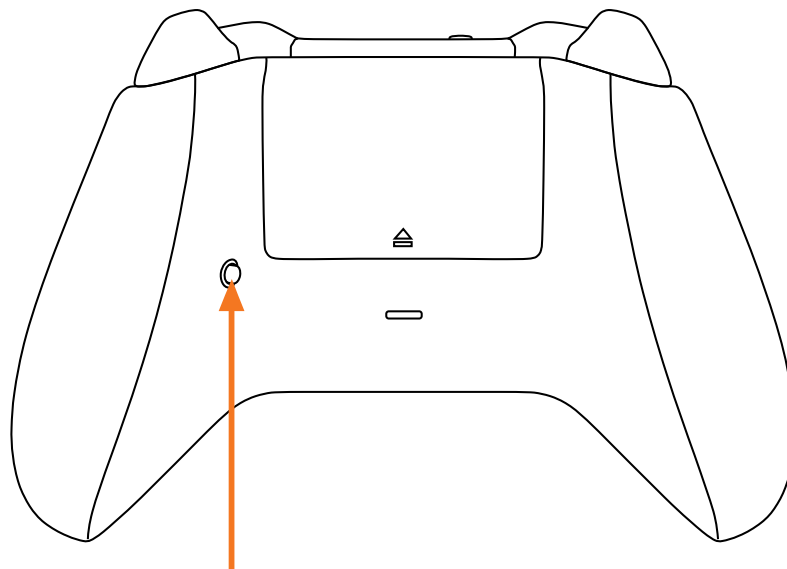

## 1 STEP. HOLD DOWN MOD BUTTON

 
## 2 STEP. HOLD DOWN B BUTTON FOR 3 SEC



The LED indicator will flash all 4 slots in WHITE indicating that the modchip has entered the sub-mode checking menu. It will then show the number of a sub-mode you have currently active:

- **1ST Sub-mode - 1 Red LED, the top left LED slot is taken**
- **2ST Sub-mode - 2 Red LEDs, top left and right slots are taken**
- **3RD Sub-mode - 3 Red LEDs, top left, top right, and bottom left slots are taken**
- **4TH Sub-mode - 4 Red LEDs**
- **5TH Sub-mode - Top Left in Green, all the rest in Red**
- **6TH Sub-mode - Top Left and Right in Green, bottom Left and Right in Red**

### Sub-Mode Number is 1

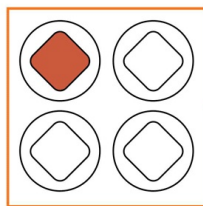

Upon checking the sub-mode, the modchip will automatically take you to the place you were before in 3 seconds. You are welcome to expedite the process by pressing the mod button on the back and exiting the sub-mode menu.

Want to learn more about the Sub-Modes Indication? [Click here](#)

## Changing Sub-Modes

To change Drop Shot & Jump Shot sub-modes, you will have to go thru sub-mode checking menu first (see above):

- **Hold down the mod button on the back.**
- **Hold down the B button for 3 seconds.**

The LED indicator will flash all 4 slots in WHITE showing that the modchip entered the sub-mode menu. It will then show the number of a sub-mode you have active currently.

- **Use the Right Trigger to increase the number of a sub-mode or use the Left Trigger to go down on a sub-mode.**
- **To save the setting, you will have to press the Mod Button.**

***NOTE:*** Keep in mind, there is a “3-second rule” that applies every time you check or change sub-modes. If you’ve been inactive for more than 3 seconds, the modchip will exit sub-mode menu automatically.

***TIP:*** There is “Quick Sub-Mode Scroll” option available on every Mega Modz Controller allowing you to get to the desired sub-mod quickly and avoid waiting for the modchip to go through the sequence of sub-modes. Quickly tapping the Right Trigger will increase the sub-mode number by the number of times the Right Trigger was tapped, getting you to the desired sub-mode rapidly. Quickly tapping the Left Trigger will decrease the sub-mode number by the number of times the Left Trigger was tapped, getting you to the desired sub-mode instantly. Example: You have sub-mode number 1 active, tapping the Right Trigger 2 times quickly will take you to the sub-mode #3. Tapping on the Right Trigger 5 times quickly will take you to the sub-mode #6

### **There are 6 sub-modes available:**

<b>Sub-Modes</b>	<b>Configurations</b>	<b>Notes</b>
1	Drop Shot	A soldier drops automatically when you fire.
2	Drop Shot	A soldier drops automatically when you hip fire, It won't drop while scoping In.
3	Jump Shot	A soldier jumps automatically when you fire.
4	Jump Shot	A soldier jumps automatically when you hip fire, It won't jump while scoping In.
5	Jump Shot	A soldier thrust jumps automatically when you fire. *
6	Jump Shot	A soldier thrust jumps automatically when you hip fire, It won't jump while scoping In. COD AW, BO3, IW*

***NOTE:*** \* Sub-modes 5 and 6 are programmable modes. In these configurations, the modchip presses B button 3 times as long as the fire-weapon button stays pressed. The delay time between B button presses can be adjusted via the programming mode in the range of 10 to 150 unit delays. One unit delay is 10 ms (1UD = 10ms). By default, the value is set to the absolute minimum - 10 unit delays (100ms). It's good for thrust jumping in all futuristic COD games. Changing custom value up to 150 unit delays (maximum) will allow the user to jump 3 times and shoot in other COD titles as long as the fire-weapon button stays pressed.

***TIP:*** We recommend using sub-modes (2, 4 and 6), where pressing ADS button

*cancels out either Dropping or Jumping, as it is the most effective way to manage your character actions and motions in the game. Depending on the gun you play with, Drop Shot & Jump Shot mod will make a good combination when used with other mods such as Rapid Fire, Fast Reload, Auto Sprint, and Sniper Breath.*

***LIMITATION:*** Drop Shot & Jump Shot mod won't work with Auto Sprint 2ND sub-mode since the latter offers similar functionality (Auto Jumping and Auto Sliding). Learn More by clicking [here](#).

## Setting Up Custom Values

### Don't like the pre-tuned speed we've provided? Create-your-own!

Reprogram your Jump Shot mod to any speed from 10 unit delays up to 150 unit delays. Jump Shot custom values are programmed by individually setting the hundreds digit, the tens digit, and the ones digit. For example, if the value is 150 unit delays, then "1" is the hundreds digit, "5" is the tens digit, and "0" is the ones digit.

If you haven't done so already, we strongly recommend learning how custom speeds indication works [here](#) before entering a "Programming Mode".

### Let's begin!

- Turn ON Jump Shot.
- Hold the mod switch on the back and then tap the Sync (Connect) button. All four LEDs will light up in WHITE to let you know that it's waiting for further input.
- Tap the button B and the modchip will take to the "hundreds" digits slot. Let's say your values started at 130 unit delays. The mod will light up the "hundreds" digit on all 4 LEDs.
- Tap the Right Trigger to increase the "hundreds": digit or tap the Left Trigger to decrease the "hundreds" digit. The mod will blink LEDs to let you know what the current number is. When you're happy with the number →
- Tap the mod switch to move to the next number. Now we're at the "tens" digit and you can adjust the numbers here. Follow the procedure from above.
- Tap the Left Trigger to decrease the "tens" digit, and tap the Right Trigger to increase the "tens" digit.
- Tap the mod switch to save that digit and move to the "ones" place.
- Lastly, we're at the "ones" digits place. Follow the procedure from above to change the numbers (if needed) one last time.
- Tap the Left Trigger to decrease the "ones", and tap the Right Trigger to increase the "ones".
- Tap the mod switch to save your selection. The mod will blink all 4 LEDs in red 3 times very quickly and exit the programming menu, saving the last setting.

***NOTE:*** The controller will always remember the last programming speed you have before powering down. There is an "8-second rule" that applies every time you enter "Programming Mode". If you've been inactive for more than 8 seconds, the modchip will exit the programming menu automatically.

***TIP:*** There is a "Quick Speed Scroll" option available on every Mega Modz Controller

*allowing you to get to the desired speed quickly and avoid waiting for the modchip to go through the sequence of speeds.*

*Quickly tapping the Right Trigger a number of times increase the speed number by the number of times the Right Trigger was tapped, getting you to the desired speed rapidly.*

*Quickly tapping the Left Trigger a number of times decrease the speed number by the number of times the Left Trigger was tapped, getting you to the desired speed instantly. »*

*Example: You have speed number 1 active, quickly tapping the Right Trigger 2 times will take you to the speed 3. Quickly tapping on the Right Trigger 5 times will take you to the speed 6.*

If you would like to only check custom numbers, then, after entering a programming mode and pressing B button, you can see the numbers in the slots without changing them by pressing the mod button and skipping the adjustment part.

It will look like this:

1. Turn ON Jump Shot Mod.
2. Enter a programming Mode.
3. Tap the button B to get into Jump Shot custom speeds.
4. First digit slot you'll see is the hundreds. See the number and press the mod button.
5. Second digit slot is the tens. See the numbers and press the mod button.
6. Third digit slot is the ones. See the numbers and press the mod button to exit the programming menu.

## **Compatible Games**

Drop Shot Mod can be used on all COD games except for Black Ops 4. Jump Shot will work with many other games such as Destiny, Titanfall and more.

**Happy shooting!**

**Having issues operating your Drop Shot & Jump Shot Mod? Visit our [Help Desk](#) for troubleshooting.**