



## AUTO SPRINT

*These Auto Sprint Instructions is an outdated version. If you purchased your controller after 1/14/2019 or want to get familiar with the latest software update please visit [this page](#).*

### Navigate To:

- [What is Auto Sprint Mod?](#)
- [How Do I Operate Auto Sprint Mode?](#)
- [What Games Is Auto Sprint Mode Compatible With?](#)

### What is Auto Sprint Mod?

You can enjoy the performance of Auto Sprint mod in Call of Duty and Battlefield gaming series. You no longer need to constantly hit the Left Thumbstick to make your soldier run as activated Auto Sprint will do it for you automatically once you specify the direction you want your soldier to sprint in.

### How Do I Operate Auto Sprint Mod?

#### To activate:

- *Hold down mod switch on the back*
- *Hold down Right Bumper and then Push In The Left Thumbstick (in default button layout). One of the open LEDs will glow **LIGHT BLUE** indicating that special feature has been activated.*

When Auto Sprint is enabled, all you have to do to make your soldier sprint is specify the direction by moving your left thumbstick up and flicking Left Trigger (in default). Now you'll never have to press your left thumbstick again. You can aim down and shoot at anytime while sprinting. Once you release Aim button, your soldier will continue sprinting.

***NOTE:*** *Auto Sprint mod cannot be used with Quick Scope simultaneously.*

#### To turn OFF:

- *Hold down mod switch on the back*
- *Hold down Right Bumper and then Push In The Left Thumbstick (in default button layout). A special LED (2, 3 or 4) will turn OFF indicating that Auto sprint Mode has been turned OFF.*

You can turn OFF all special modes (2, 3 and 4 LEDs) at any time by holding down mod switch on the back and tapping A button. All 2, 3 and 4 LEDs will turn off indicating that all special features have been turned OFF.

## **What Games Is Auto Sprint Mod Compatible With?**

Auto Sprint Mod is compatible with Call of Duty, Battlefield, Destiny, and Titanfall games.