



## AUTO SPRINT

*These Auto Sprint Instructions is an outdated version. If you purchased your controller after 1/14/2019 or want to get familiar with the latest software update please visit [this page](#).*

### Navigate To:

- [What is Auto Sprint Mod?](#)
- [How Do I Operate Auto Sprint Mod?](#)
- [What Games Is Auto Sprint Mod Compatible With?](#)

### What is Auto Sprint Mod?

Auto Sprint mod is a useful feature specially designed for Call of Duty and Battlefield games. Free up your hands as you won't need to constantly hit the Left Thumbstick to make your soldier sprint – Auto Sprint will do it for you.

### How Do I Operate Auto Sprint Mode?

#### To activate:

- *Hold down mod switch on the back*
- *Hold down R1 button and then Push In The Left Thumbstick (in default button layout). One of the open LEDs will glow **LIGHT BLUE** indicating that special feature has been activated.*

When Auto Sprint is enabled, all you have to do to make your soldier sprint is specify the direction by moving you left Thumb stick up and flicking L2 button (in default). Now you'll never have to press your left thumbstick again. You can aim down and shoot at anytime while sprinting. Once you release Aim button, your soldier will continue sprinting.

**NOTE :** *Auto Sprint mode cannot be used with Sniper Breath and Quick Scope simultaneously*

#### To turn OFF:

- *Hold down mod switch on the back*
- *Hold down R1 button and then Push In The Left Thumbstick (in default button layout). A special LED (2, 3 or 4) will turn OFF indicating that Auto sprint Mode has been turned OFF.*

You can turn OFF all special modes (2, 3 and 4 LEDs) at any time by holding down mod

switch on the back and tapping X button. All 2, 3 and 4 LEDs will turn off indicating that all special features have been turned OFF.

## **What Games Is Auto Sprint Mod Compatible With?**

Auto Sprint Mod is compatible with Call of Duty, Battlefield, Destiny, TitanFall and some other FPS games.