



AUTO SPRINT

Navigate To:

- [What is Auto Sprint Mod?](#)
- [How does Auto Sprint work?](#)
- [What Games Is Auto Sprint Mod Compatible With?](#)

What is Auto Sprint Mod?

You can enjoy the performance of Auto Sprint mod in Call of Duty and Battlefield gaming series. You no longer need to constantly hit the Left Thumbstick to make your soldier run as activated Auto Sprint will do it for you automatically once you specify the direction you want your soldier to sprint in.

How does Auto Sprint work?

To enable auto sprint, hold down the mod switch, hold the right bumper (throw lethal button), and then tap your left thumbstick (sprint button). Special LED will glow AQUA/LIGHT BLUE to let you know that this special feature has been activated.

When Auto Sprint is enabled, all you have to do to make your soldier sprint is specify the direction and flick Left Trigger (In default). Now you'll never have to press your left thumbstick again. This will eliminate wear and tear on your thumb – and your thumbstick.

NOTE : Auto Sprint mode cannot be used with Sniper Breath and Quick Scope simultaneously.

To turn OFF:

- *Hold down mod switch on the back*
- *Hold down right bumper and then push In the left thumbstick (in default button layout). A special LED (2, 3 or 4) will turn OFF indicating that Auto Sprint Mode has been turned OFF.*
- *You can turn OFF all special modes (2, 3 and 4 LEDs) at any time by holding down mod switch on the back and tapping A button. All 2, 3 and 4 LEDs will turn off indicating that all special features have been turned OFF.*

What Games Is Auto Sprint Mod Compatible With?

Auto Sprint Mod is compatible with Call of Duty, Destiny, Battlefield , and Titanfall games.